


Geometry Tools: Warped Parameter Copier

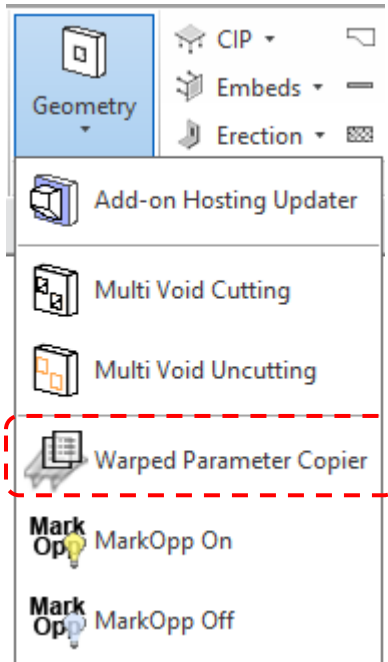

Known Limitations:

- NA

Programmed Result of Tool:

This tool copies the values of “warped” parameters to each subsequent selected family instance which also includes warped parameters. The command is ended by the user clicking the escape key.

Steps to Perform tool Operation:

The tool will automatically copy and paste all “warped” parameter values and update the subsequent warp-able family instances with the copied values.

- 1) User clicks the Warped Parameter Copier icon.
- 2) User then selects the warped structural framing member from which to copy the parameter values.
- 3) User clicks the subsequent structural framing members in which the copied parameters are to be used to update those values of the selected member.
- 4) User continues to click additional warp-able structural framing members until the desired updates are complete.
- 5) User ends the command by clicking the escape key.