



Hardware Detail Tools: HW Title Block Populator Settings

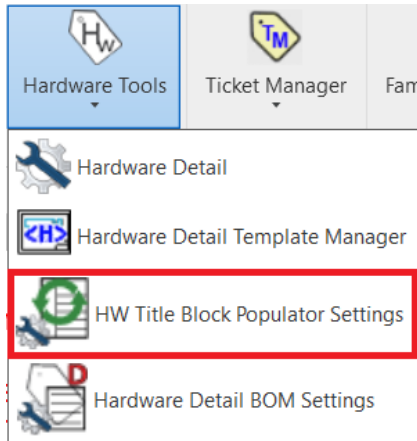

Programmed Result of Tool:

Will allow the user to add and delete parameter mappings that will be used when updating the title block of Hardware Details by the Hardware Detail tools. The source parameter will be a parameter in the assembly or element in the assembly with a matching control mark. The value for this parameter is what the corresponding sheet parameter selected will be set to on the Hardware Detail sheet. If the title block family is created correctly, the values from the sheet parameters will populate the title block. The folder path for the settings file can be set in the EDGE Preferences tool.

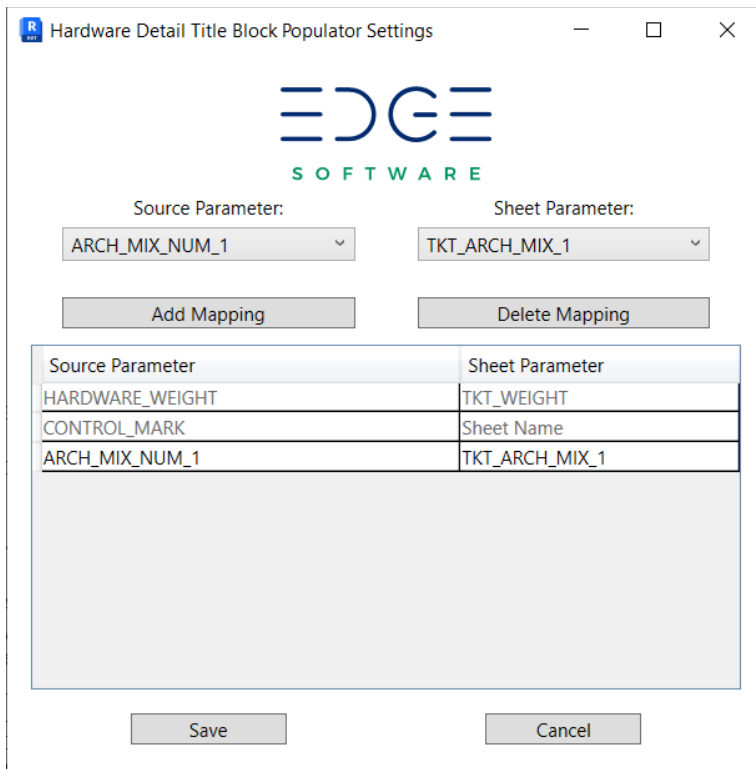

Steps to Perform Tool Operation:

Add parameter mapping:

1. Select source parameter from Source Parameter drop down box.
2. Select sheet parameter from the Sheet Parameter drop down box.
3. Click "Add Mapping" button.

Delete parameter Mapping:

1. Click parameter mapping in list.
2. Click "Delete Mapping" button.

Save changes made to list:

1. Click "Save" button.

Cancel change made to list:

1. Click "Cancel" button.

The first two mappings with grey text in the list are defaults and cannot be deleted.