


# Insulation Tools: Insulation Removal

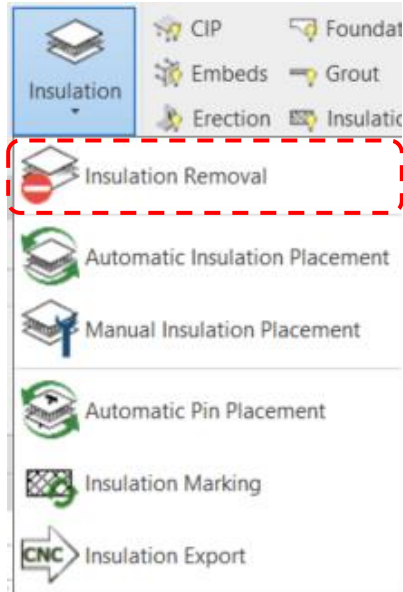

## **Programmed Result of Tool:**

The Insulation Removal tool is designed to remove large sheets of insulation that are nested into the insulated wall panel families. This tool will toggle off the INSULATION\_INCLUDED parameter on insulated wall panel instances in the project.

## **Steps to Perform Tool Operation:**

1. Select the Insulation Removal tool under the Insulation drop-down.
2. Select the scope of elements to be processed: whole model, active view, or selection group.

## **Known Limitations:**

- Only Structural Framing category elements that have a CONSTRUCTION\_PRODUCT parameter value containing both "WALL" and "INSULATED" will be eligible for processing by this tool.
- The insulated wall panel family must have the INSULATION\_INCLUDED parameter in order to be processed.
  - The INSULATION\_INCLUDED parameter should be configured within the wall panel family such that it would control the visibility of any relevant nested insulation families.